

PARABOLIC MICROPHONE SYSTEM

QUICK GUIDE INSTALLATION MANUAL , 12.06.2019



ASSEMBLY

PLEASE LOCATE:

SHIPMENT INCLUDES:

1 HANDLE (BLACK) INCLUDING THE FIXED MICROPHONE CABLE

1 RYCOTE MICROPHONE HOLDER (GRAY) INCL. **MOUNTING KIT** (GRAY TUBE, GRAY RING & BLACK RING) SECURED BACK OF **RYCOTE MICROPHONE HOLDER**.

1 SCHOEPS CCM MICROPHONE (DARK GRAY)

1 PARABOLIC DISH 22 INCH FOLDABLE (TRANSPARENT)

1 RYCOTE FAKE-FUR WIND-JAMMER (GRAY)

IMPORTANT: PLEASE ALWAYS STORE ONLY DISH FOLDED IN GREEN SOFT CASE OR YOUR OWN HARD CASE UNFOLDED (HARD CASE FOR COMPLETE SYSTEM COMING END 2018) WITH THE REST OF THE SYSTEM IN THE ALREADY INCLUDED SMALL **PELI HARD CASE**.



(PHOTO ABOVE: THE COMPLETE SYSTEM BEFORE ASSEMBLING)

STEP 1. REMOVE THE MOUNTING KIT FROM THE RYCOTE MICROPHONE HOLDER AND ATTACH AS BELOW PHOTO TO **DISH. **GRAY TUBE** THRU THE HOLE OF THE DISH WITH **BLACK RING** BACK OF THE DISH AND GRAY RING WITH THREAD AT THE INSIDE OF THE DISH. PLEASE MAKE SURE YOU SECURE IT TIGHTLY OR HANDLING NOISE MIGHT OCCUR.**




(PHOTO: MOUNTING KIT SECURED)

STEP 2. FASTEN AND SECURE THE HANDLE TO THE MOUNTING KIT HOLDING THE DISH USING THE KNOB.





STEP 3. SECURE THE **HANDLE CYLINDER “STOPPER”** ATTACHED TO CABLE INSIDE THE **TUBE** WITH THE CABLE GROMMIT ALIGNED BACK OF **TUBE *PLACED AS PHOTO**
TIP! LOOSEN UP THE KNOB, PLACE CYLINDER INSIDE, THEN SECURE KNOB AGAIN.
STEP 4. REMOVE THE **FRONT CAP** OF THE **RYCOTE MICROPHONE HOLDER** AND **TAKE OUT** THE **BLACK FOAM** COMPLETELY OUT OF THE HOLDER.

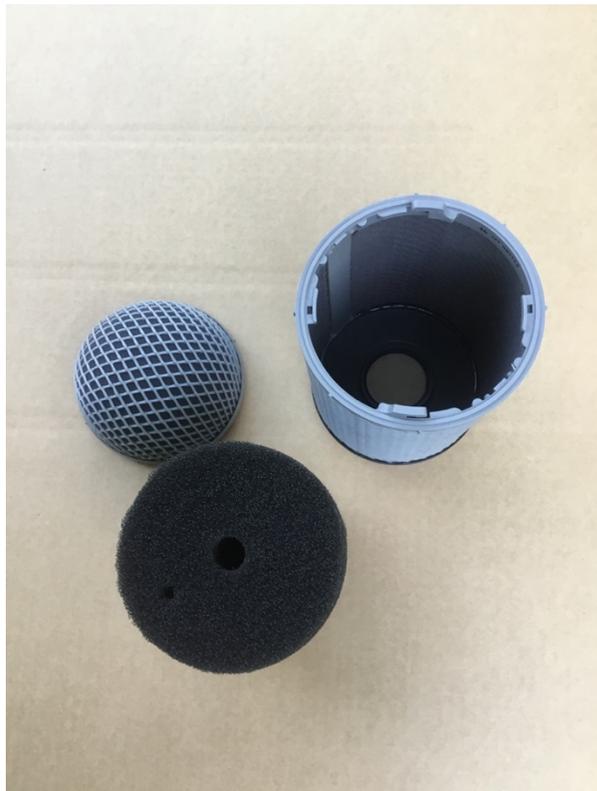

STEP 5. MOUNT & SECURE RYCOTE MICROPHONE HOLDER WITHOUT FOAM.



(IMPORTANT: CABLE THRU THE HOLDER!)

STEP 6. SLIDE THE FIXED CABLE OF THE HANDLE THRU THE **SMALL HOLE BACK OF THE **FOAM** UNTIL THE CONNECTOR IS COMPLETELY THRU THE **FOAM** VISIBLE WITH CONNECTOR FRONT OF **FOAM**.**



(**IMPORTANT:** USE BOTH HANDS AND GENTLY SLIDE THE CABLE THRU THE SMALLER HOLE OF THE FOAM UNTIL VISIBLE AT THE OTHER END OF THE HOLDER, (FRONT) WHERE THE MICROPHONE WILL BE MOUNTED)

STEP 6. HANDLE CABLE CORRECTLY INSTALLED AND FOAM FIXED.



(IMPORTANT: PULL GENTLY OUT THE CABLE ALLOWING TO MOUNT MICROPHONE AS NEXT STEP WITH A GENEROUS CABLE U-BEND)

STEP 7. ATTACH AND LOCK THE SCHOEPS CCM MIC WITH THE THREAD SCREW.



STEP 8. PLACE AND SECURE THE SCHOEPS MICROPHONE INSIDE THE RYCOTE MICROPHONE HOLDER FOAM.

MIC SHOULD BE FACING (POINTING) TOWARDS THE DISH **INWARDS!**



IMPORTANT: MIC IN FOCUS ONLY WHEN THE BACK OF THE MIC BODY IS ALIGNED WITH THE FOAM AS PHOTO ABOVE. PLEASE ALLOW THE CABLE TO FORM A U-SHAPE.

STEP 9. SECURE AGAIN FRONT CAP OF THE RYCOTE MIC HOLDER.



SYSTEM READY!

CONNECT ONLY A STANDARD BALANCED XLR MICROPHONE CABLE FROM BOTTOM OF THE HANDLE TO YOUR RECORDER, VIDEO CAMERA OR AMPLIFIER. ENABLE +48V PHANTOM POWER!

OPTIONAL:
ATTACHING THE RYCOTE WIND JAMMER AND TRIPOD MOUNT.



(PHOTO: LOOSEN UP THE TOP SCREW OF THE HANDLE, SLIDE IN THE TRIPOD MOUNT AND THE SECURE AGAIN THE TOP SCREW)

DISASSEMBLING

1. REMOVE THE **FRONT CAP** OF THE **RYCOTE MICROPHONE HOLDER**.
2. PULL OUT GENTLY AND REMOVE THE **SCHOEPS CCM MICROPHONE** OF THE CONNECTOR AND PLACE THE MICROPHONE IN IT'S PROTECTIVE CASE.
3. TAKE OUT THE **FOAM** WHILE KEEPING ONE HAND HOLDING THE BACK OF THE CABLE (SEE PHOTO 2 BELOW) ENABLING THE **FOAM** TO SLIDE OUT AND BE REMOVED WITHOUT FORCING **THE CABLE AND CONNECTOR**.



AFTER TAKING OUT THE FOAM

4. LOOSEN THE **RYCOTE MICROPHONE HOLDER** (PHOTO NEXT PAGE) FROM THE DISH BY HOLDING ONE HAND AROUND THE GRAY **TUBE** OF THE **MOUNTING KIT** BACK OF THE **HANDLE** AND USING THE OTHER HAND TO REMOVE **RYCOTE MICROPHONE HOLDER**.



(PHOTO: REMOVING THE RYCOTE MICROPHONE HOLDER AFTER THE FOAM HAS BEEN TAKEN OUT, PLEASE HOLD ONE HAND AROUND THE TUBE WHILE REMOVING THE HOLDER WITH THE OTHER HAND)

5. REMOVE THE MOUNTING KIT FROM THE DISH.



SYSTEM DISASSEMBLED.

FOLDING THE DISH AND PACKING IT IN THE SOFT CASE



FOR ADDITIONAL SUPPORT PLEASE CONTACT:

Jon Strandberg, Telinga Microphones

jon@telinga.com

PH: +46 (0) 702 979 979

For more information regarding the **SCHOEPS CCM** microphone, specifications and EQ filter please visit www.schoeps.de/dish

© 2019

TELINGA MICROPHONES, SWEDEN.

www.telinga.com